


Operation Guide for Frymaster Electric Deep Fryer SR14E

Following these simple instructions will ensure the successful operation of your rental appliance.


Aztec appliances are equipped with Nema #15-50p plugs, and will require you to have a 50 Amp, 250v Nema #15-50r receptacle. Please see photos below:



Nema #15-50p

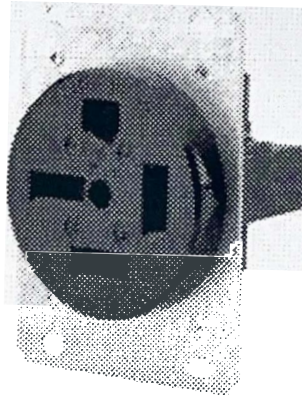

Nema #15-50r

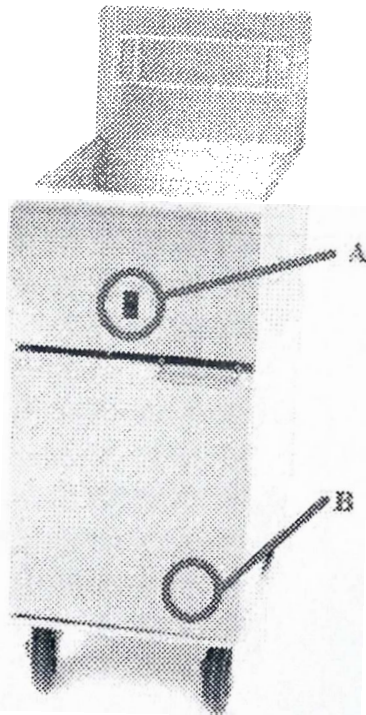

(A) Power Switch

(B) Thermostat (inside door)



Operation of Deep Fryer

- 1) Ensure that power switch (A) is in the OFF (down) position.
- 2) Open door and ensure that the drain valve is closed.
- 3) Add oil to the fryer as needed
- 4) Plug unit into wall receptacle.
- 5) Turn power switch to the ON (up) position.
- 6) Open door and adjust thermostat (B) as needed.

After your event, it is imperative that all oil is removed from deep fryer prior to its pick up / return to Aztec.