 
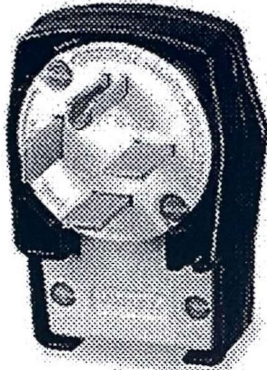 
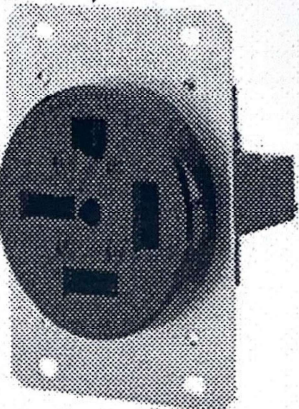 


Operation Guide for Hobart Electric Convection Oven DEC5

Following these simple instructions will ensure the successful operation of your rental appliance.

Aztec appliances are equipped with Nema #15-50p plugs, and will require you to have a 50 Amp, 250v Nema #15-50r receptacle. Please see photos below:

| | |
|---|--|
|  |  |
| <p>Nema #15-50p</p> | <p>Nema #15-50r</p> |
|  | <p>(A) Power Switch</p> <p>(B) Thermostat</p> <p>(C) Timer</p> <p>(D) Fan Speed Switch</p> |

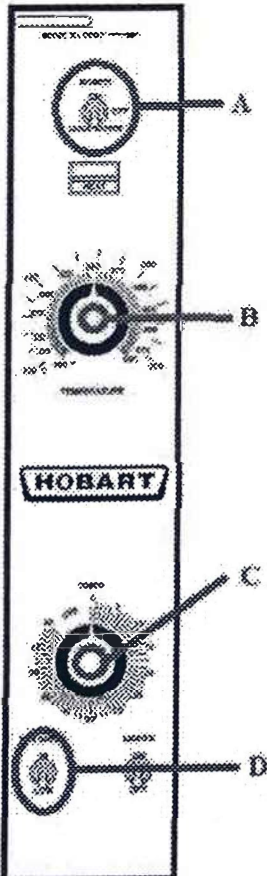

Operation of Oven

- 1) Ensure that power switch (A) is in the OFF (middle) position.
- 2) Plug unit into wall receptacle.
- 3) Turn power switch to the ON (up) position.
- 4) Adjust thermostat (B) and fan speed switch (D) as needed.
- 5) Oven doors **MUST** be closed for the oven to operate.
- 6) When done cooking, power switch can be set to the COOL DOWN (down) position to operate fan with doors open.